
Dell Inspiron E1705 Battery Replacement

How to remove your battery from the battery compartment.


Written By: Malik Shahbal

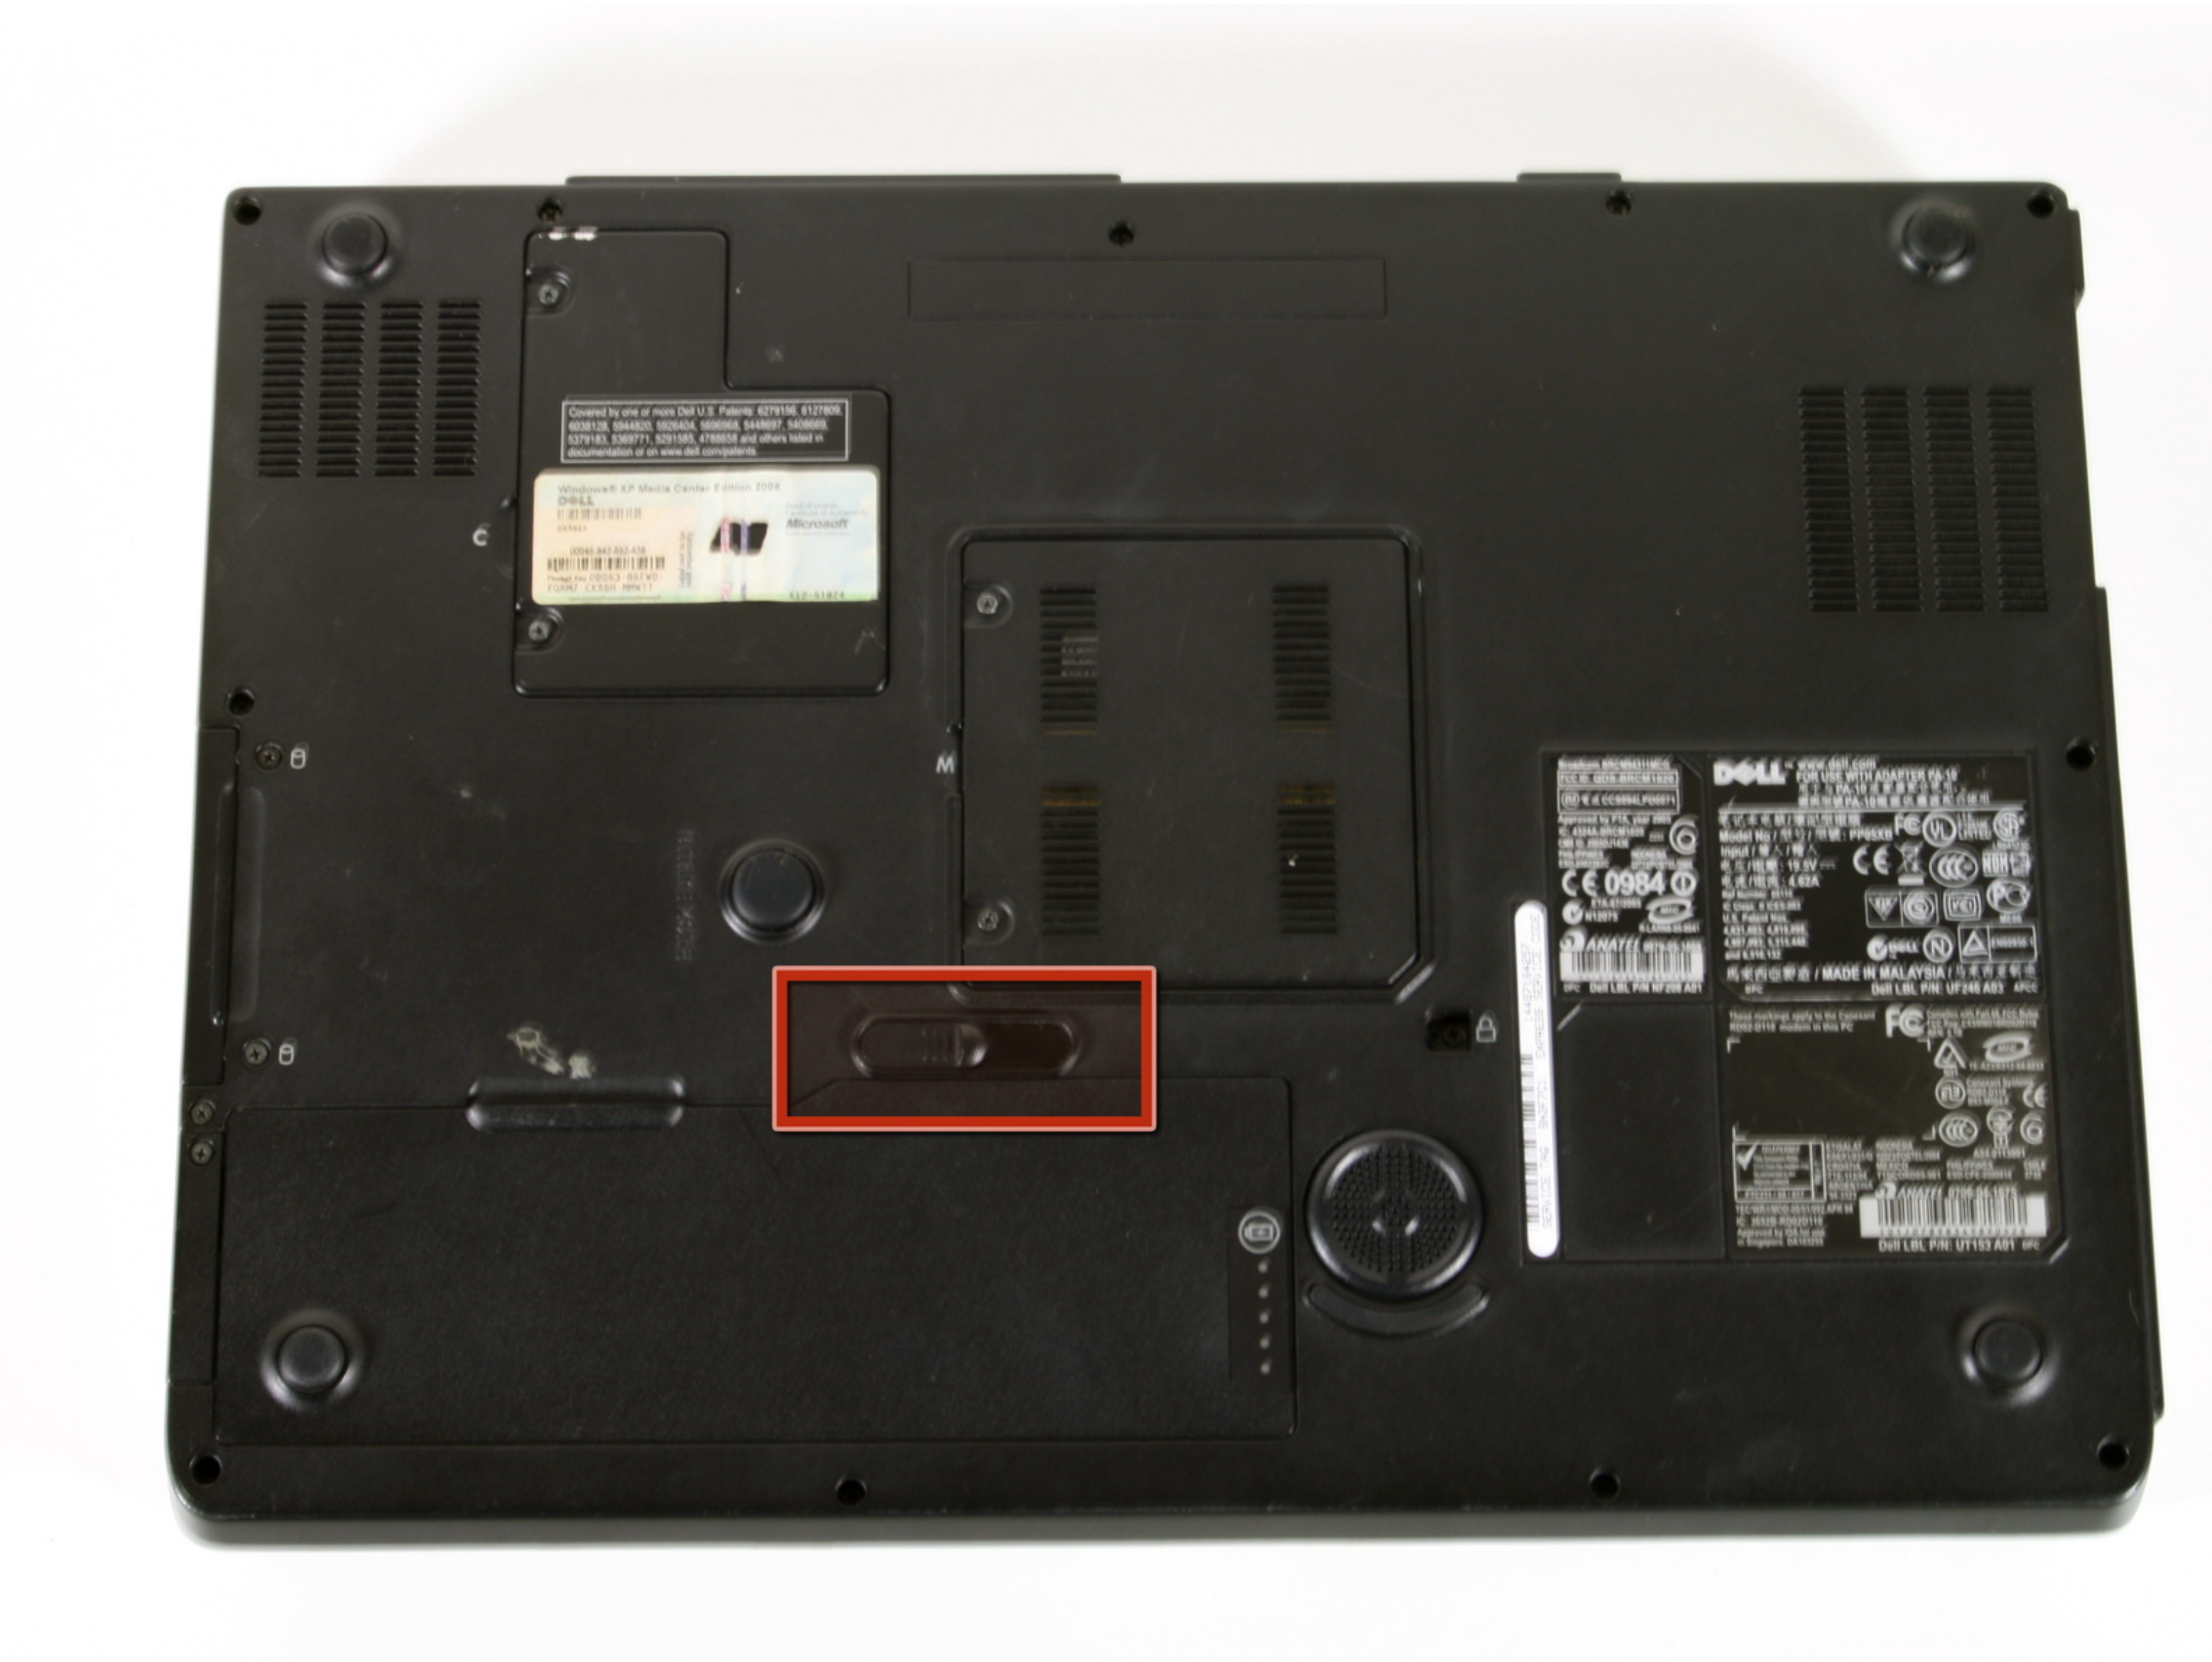

INTRODUCTION


This guide is very important for other guides, as the battery must be removed before dealing with electronic connections within the computers encasement.


Step 1 — Battery

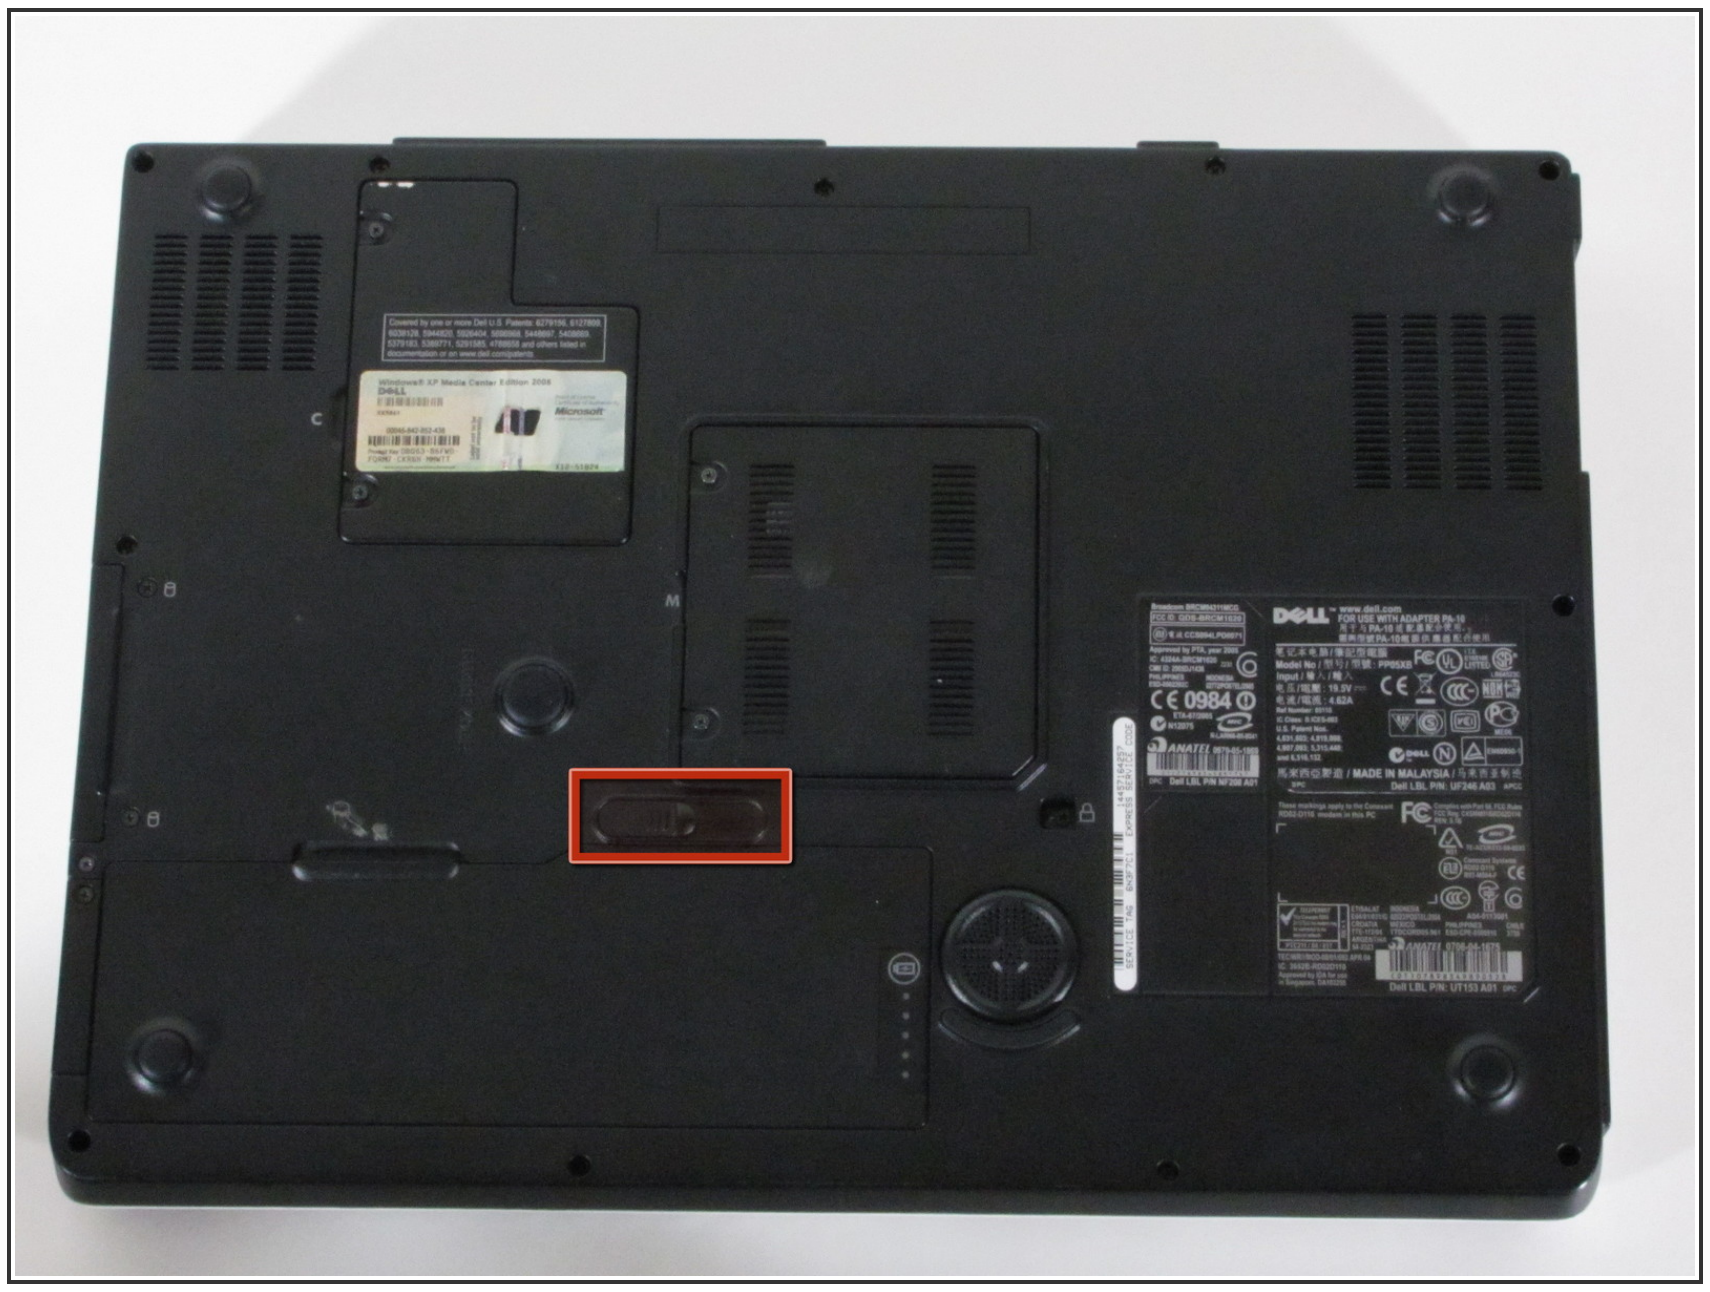

- Make sure that the computer is turned off and is disconnected from external power source.
- Turn it upside down and locate the battery release switch.

Step 2

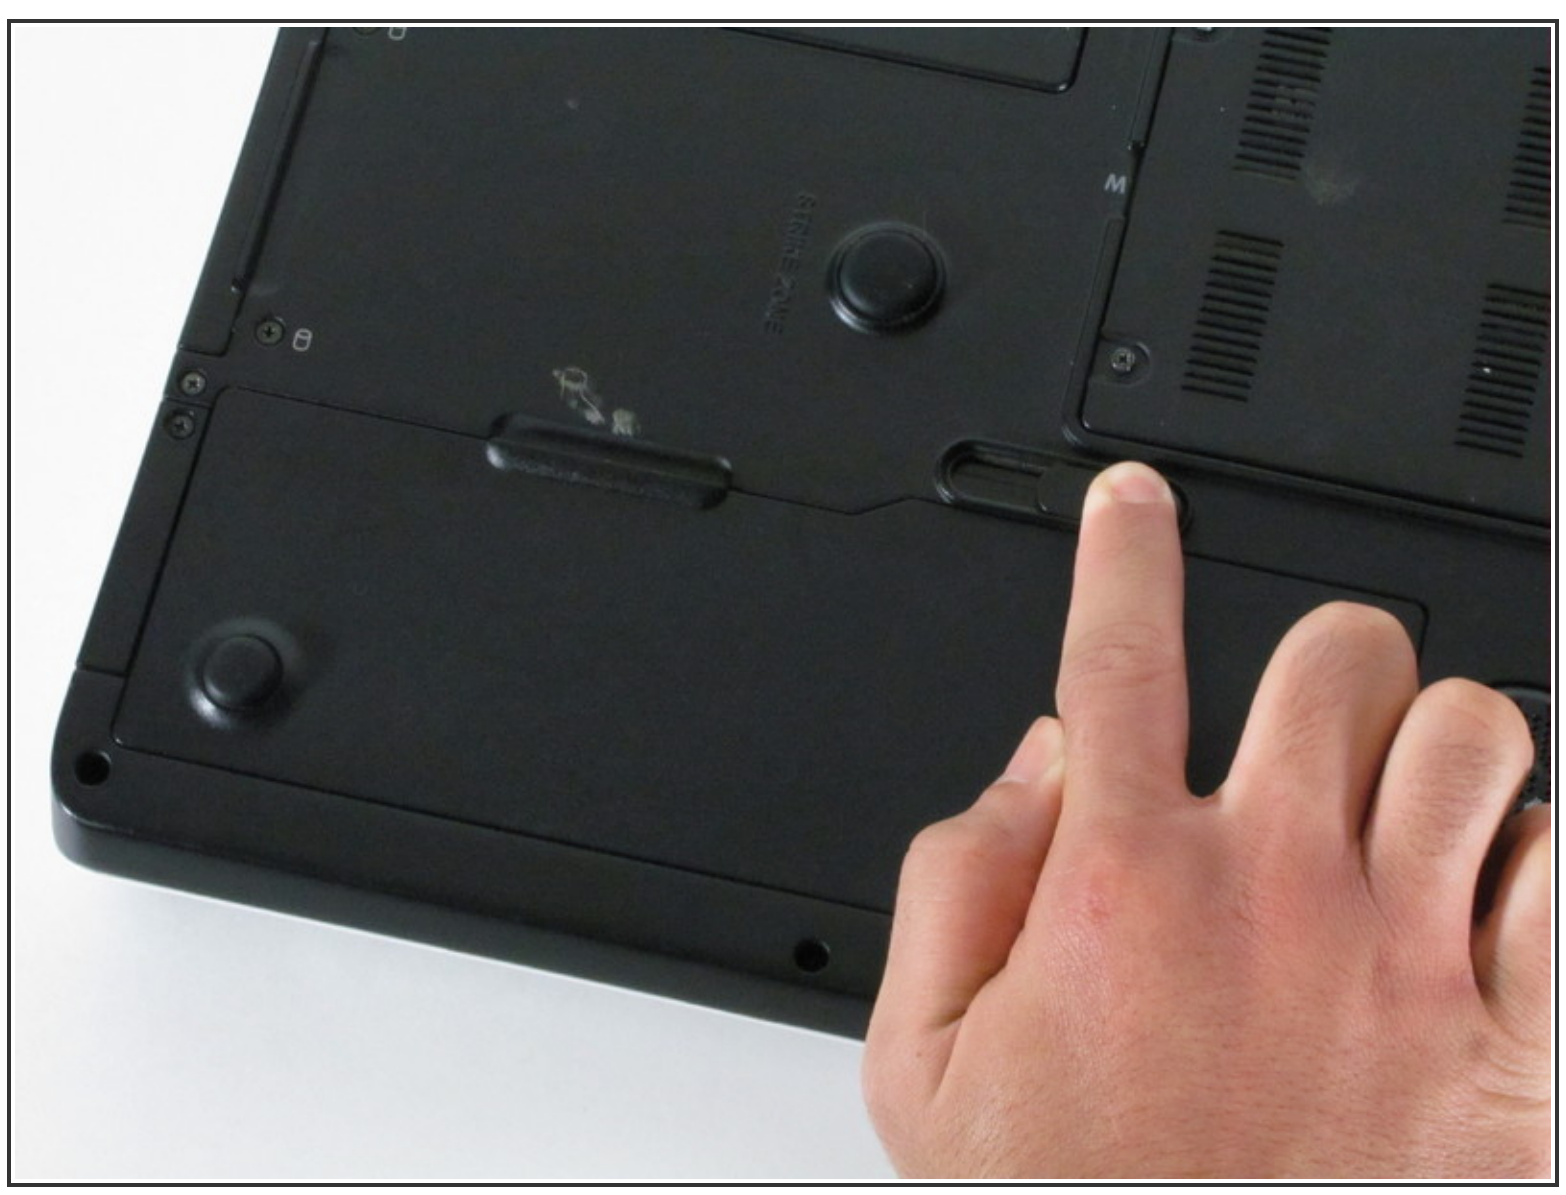

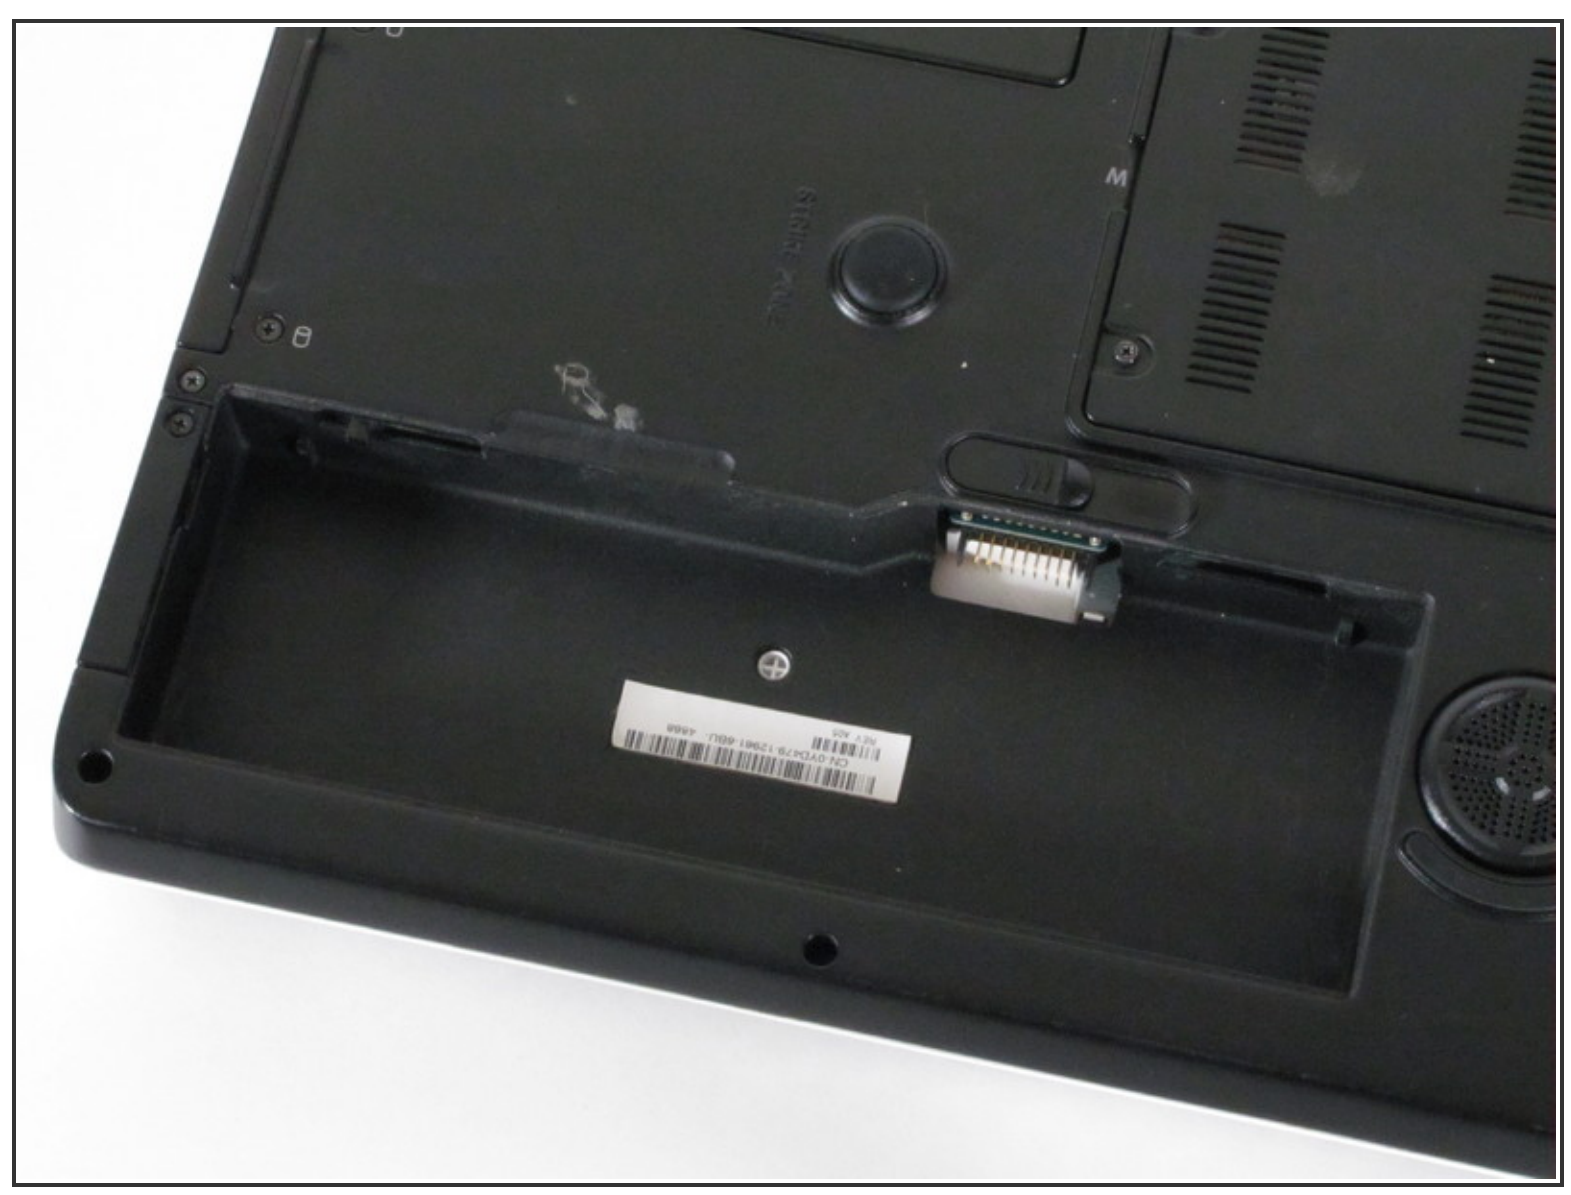

- While holding the switch in the open position, lift out the battery.
- If you plan to work on any internal laptop components, press and hold the power button for 5 seconds. This will dissipate any residual charge on the motherboard to prevent electrical shock when you begin to handle it.

To replace your battery, follow these instructions in reverse order.

This document was last generated on 2017-07-11 03:05:15 PM.